

```
*Aug 24 10:00:04.845: %LINK-3-UPDOWN: Interface Ethernet0/2, changed state to do
wn
*Aug 24 10:00:04.854: %LINK-3-UPDOWN: Interface Ethernet0/3, changed state to do
wn
*Aug 24 10:00:05.845: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/
2, changed state to down
*Aug 24 10:00:05.854: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/
3, changed state to down
Router#
Router#
Router#
Router#
Router#conf t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#int e0/0
Router(config-if)#ip add 50.0.0.1 255.0.0.0
Router(config-if)#no sh
Router(config-if)#exit
Router(config)#
Router(config)#
Router(config)#
Router(config)#int e0/1
Router(config-if)#ip add 60.0.0.1 255.0.0.0
Router(config-if)#no sh
Router(config-if)#exit
Router(config)#
```



My Documents

My Computer

My Network Places

Recycle Bin




Internet Explorer

Cisco ASDM-1...

Old Java ASDM

PUTTY

Tftpd32

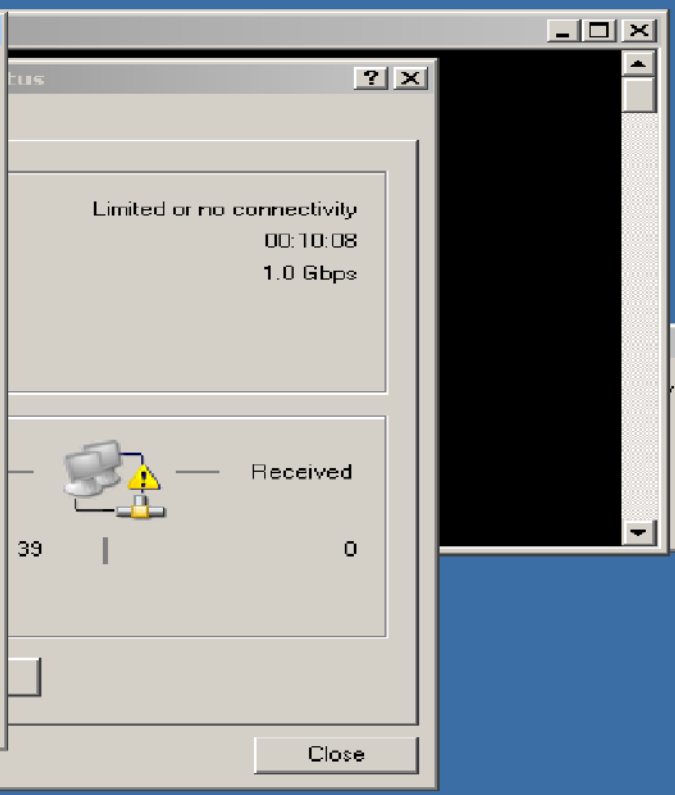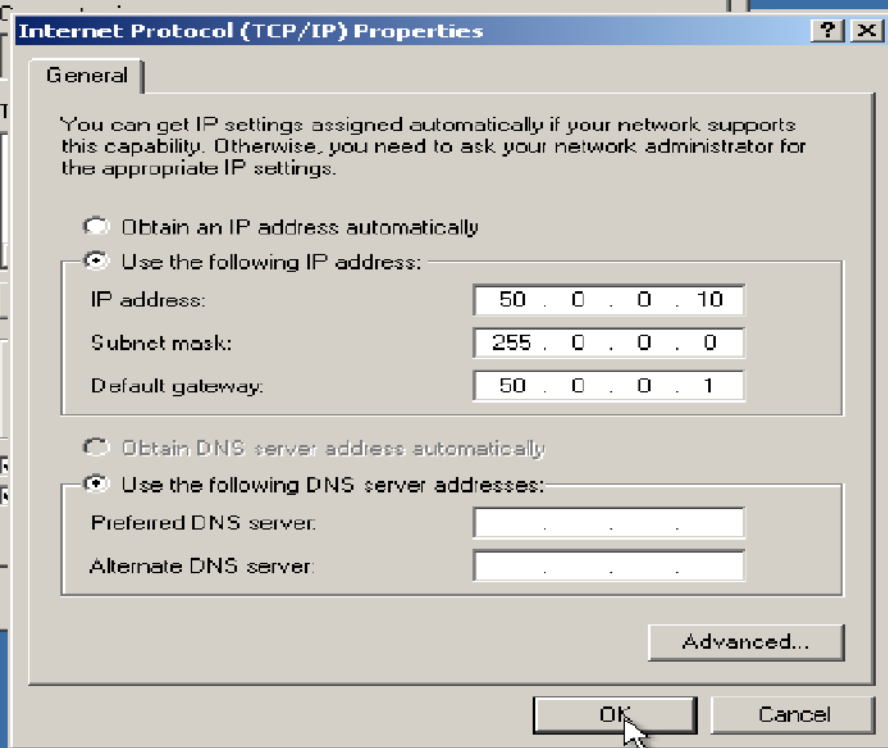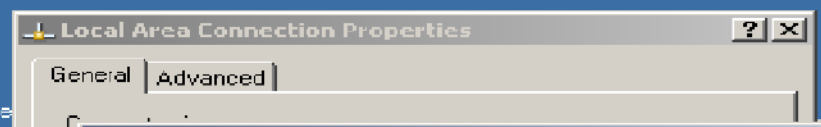

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\user>ncpa.cpl

C:\Documents and Settings\user>route print
=====
Interface List
0x1 ..... MS TCP Loopback interface
0x2 ...50 fe 9c 09 4f 00 ..... Intel(R) PRO/1000 MT Network Connection - Packet
Scheduler Miniport
=====
Active Routes:
Network Destination    Netmask          Gateway          Interface        Metric
0.0.0.0                0.0.0.0          50.0.0.1         50.0.0.10        10
50.0.0.0              255.0.0.0        50.0.0.10        50.0.0.10        10
50.0.0.10             255.255.255.255  127.0.0.1        127.0.0.1        10
50.255.255.255        255.255.255.255  50.0.0.10        50.0.0.10        10
127.0.0.0             255.0.0.0        127.0.0.1        127.0.0.1        1
224.0.0.0             240.0.0.0        50.0.0.10        50.0.0.10        10
255.255.255.255       255.255.255.255  50.0.0.10        50.0.0.10        1
Default Gateway:      50.0.0.1
=====
Persistent Routes:
None

C:\Documents and Settings\user>
```

Local Area Connection Properties

General | Advanced

Internet Protocol (TCP/IP) Properties

General

You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.

☐ Obtain an IP address automatically

☒ Use the following IP address:

IP address: 60 . 0 . 0 . 10

Subnet mask: 255 . 0 . 0 . 0

Default gateway: 60 . 0 . 0 . 1

☐ Obtain DNS server address automatically

☒ Use the following DNS server addresses:

Preferred DNS server: . . .

Alternate DNS server: . . .

Advanced...

OK Cancel

Status

Limited or no connectivity

00:15:12

1.0 Gbps


49 | 0

Close

Details

Local Area Connection

LAN or High-Speed Internet

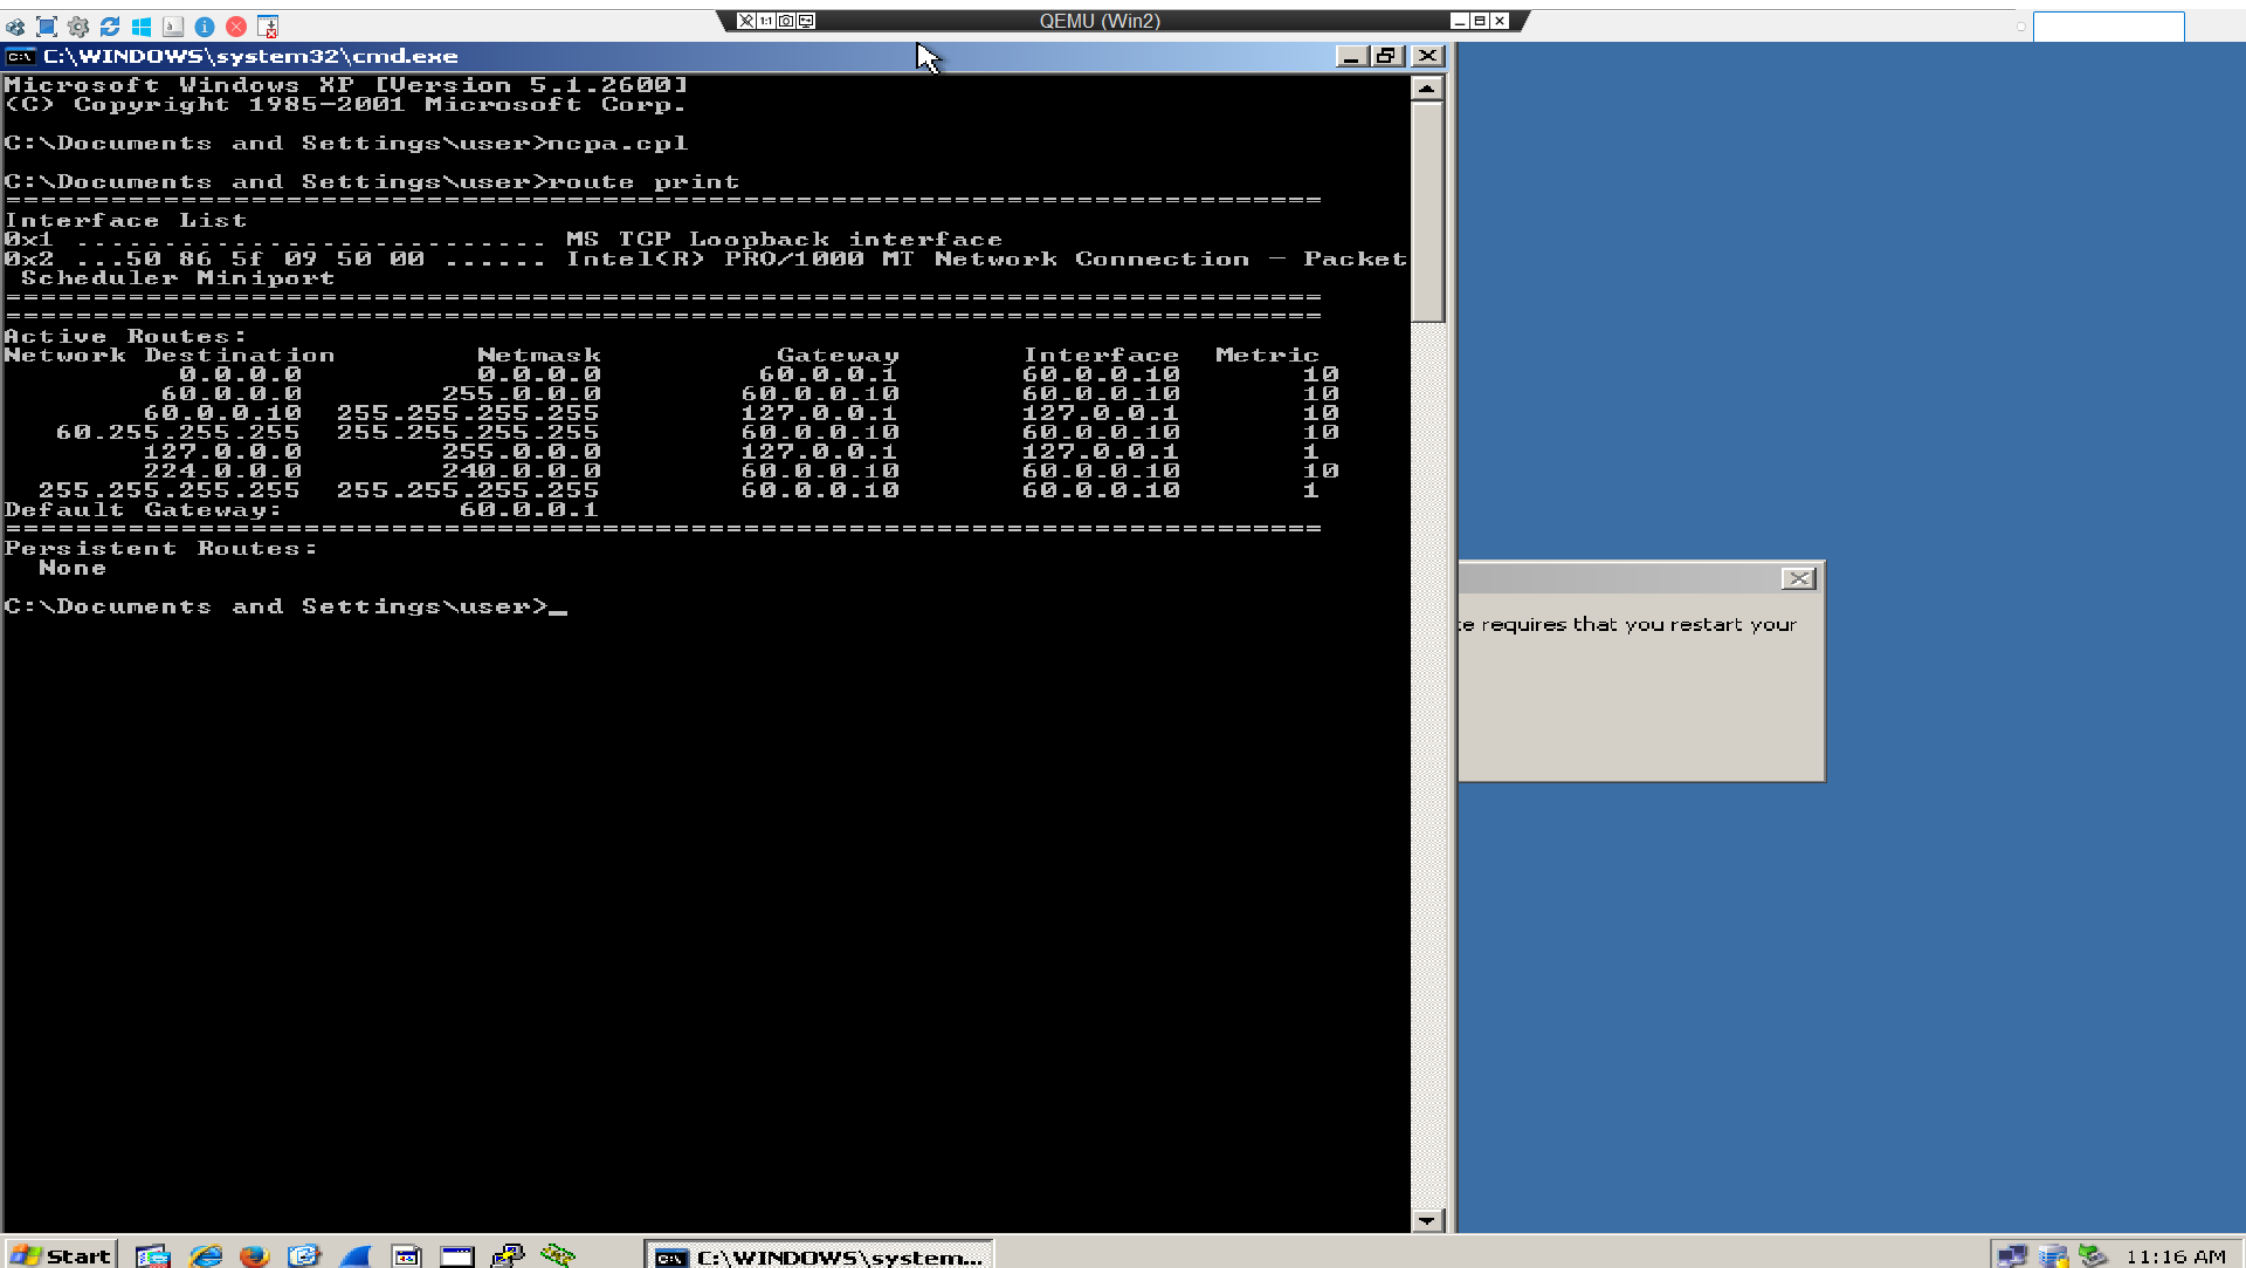

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\user>ncpa.cpl

C:\Documents and Settings\user>route print
=====
Interface List
0x1 ..... MS TCP Loopback interface
0x2 ...50 fe 9c 09 4f 00 ..... Intel(R) PRO/1000 MT Network Connection - Packet
Scheduler Miniport
=====
Active Routes:
Network Destination        Netmask          Gateway          Interface        Metric
0.0.0.0                    0.0.0.0          50.0.0.1        50.0.0.10        10
50.0.0.0                    255.0.0.0        50.0.0.10      50.0.0.10        10
50.0.0.10                  255.255.255.255  127.0.0.1      127.0.0.1        10
50.255.255.255             255.255.255.255  50.0.0.10      50.0.0.10        10
127.0.0.0                  255.0.0.0        127.0.0.1      127.0.0.1        1
224.0.0.0                  240.0.0.0        50.0.0.10      50.0.0.10        10
255.255.255.255           255.255.255.255  50.0.0.10      50.0.0.10        1
Default Gateway:          50.0.0.1
=====
Persistent Routes:
None

C:\Documents and Settings\user>ping 60.0.0.10

Pinging 60.0.0.10 with 32 bytes of data:

Reply from 60.0.0.10: bytes=32 time=3ms TTL=127
Reply from 60.0.0.10: bytes=32 time=1ms TTL=127
Reply from 60.0.0.10: bytes=32 time=1ms TTL=127
Reply from 60.0.0.10: bytes=32 time=1ms TTL=127

Ping statistics for 60.0.0.10:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 1ms, Maximum = 3ms, Average = 1ms

C:\Documents and Settings\user>_
```